



MAIN KEYS

Stop

Stops the WASHLET operation

Rear Soft on/off

Activates rear cleansing. Press again and it will be with low pressure.

Front

Activates bidet cleansing

Dryer

Activates a gentle stream of warm air

User 1/2

Stores the user preferred settings and helps to reuse them easily

SUB KEYS

(KEYS SIDeways AND ABOVE)

Pulsating

Causes pulses of varying water pressure

Oscillating

Moves the nozzle back and forth for thorough cleansing

Pressure

Adjusts the water pressure to one of five levels

Position

Adjusts the position of the nozzle to one of five positions



Raises and closes seat and lid

