


Quick Start

WASHLET™ EK 2.0


TOTO

TCF6632C3GV1

TCF6632G#NW1 / TCF6632GE#NW1 / TCF6632SW#NW1

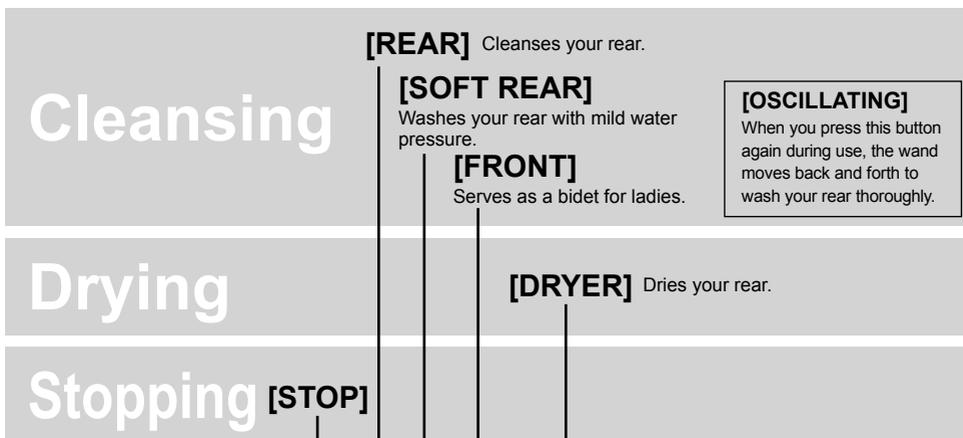

[OSCILLATING]
When you press this button again during use, the wand moves back and forth to wash your rear thoroughly.

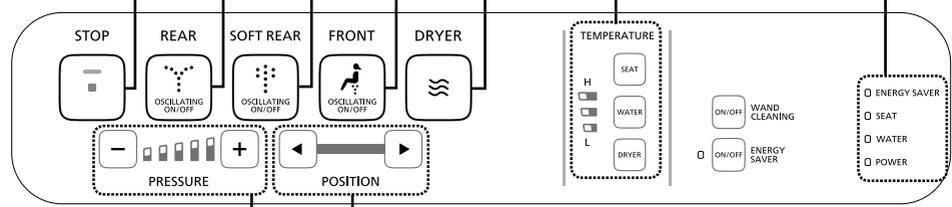

● Functions that operate when a button is pressed during "REAR", "SOFT REAR" or "FRONT" cleansing.

[PRESSURE]
You can adjust the water pressure as desired to 5 different levels.
● The PRESSURE LEDs light up when you sit on the toilet seat.

[POSITION]
You can adjust the washing position as desired to 5 different points.
● The washing position returns to the standard position (3rd point) when you stand up from the toilet seat.

Note

• Sitting back on the toilet seat makes it easier to adjust the wand position and to reduce splashing.